

FIGURE 2

```
Network Address ~ 301
```

Network Mask - 302

Weight or Cost of Route - 303

Next Hop Neighbor Address - 304


300

Next Hop Physical Interface - 305

Protocol Type - 306

Route Attributes - 307

FIGURE 3

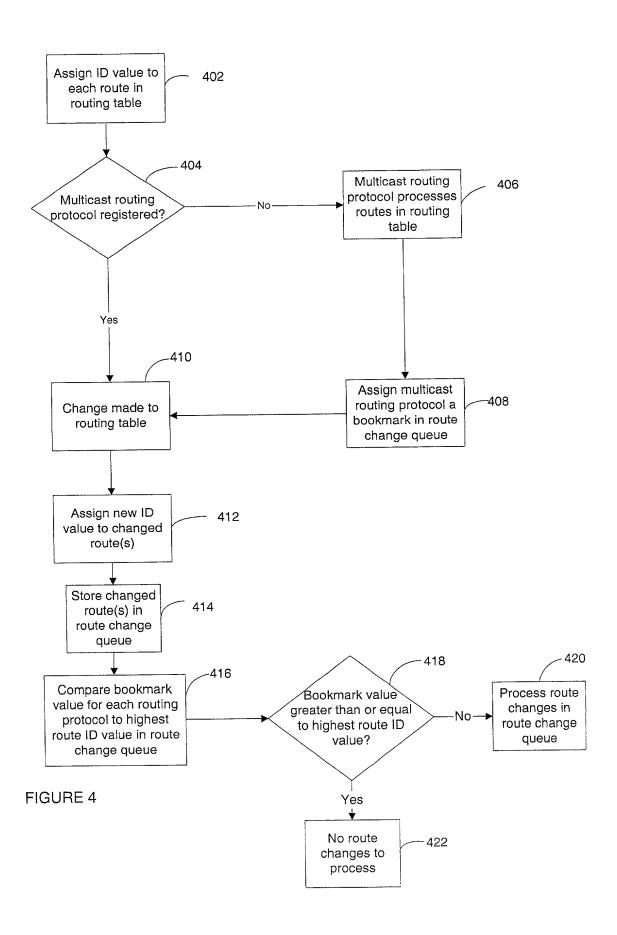

```
wfIpMrtmInjectRtTable OBJECT-TYPE
        SYNTAX SEQUENCE OF WfIpMrtmInjectRtEntry
        ACCESS not-accessible
        STATUS mandatory
        DESCRIPTION
                "The Table of MRTM Inject Unicast routes Policy Rules"
        ::= { wfIpPolicyGroup 21 }
wfIpMrtmInjectRtEntry OBJECT-TYPE
    SYNTAX WfIpMrtmInjectRtEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
            "An entry in the Mrtm Inject Route Rule Table"
    INDEX { wfIpMrtmInjectRtIndex }
    ::= { wfIpMrtmInjectRtTable 1 }
WfIpMrtmInjectRtEntry ::= SEQUENCE {
        wfIpMrtmInjectRtDelete
            INTEGER,
        wfIpMrtmInjectRtDisable
            INTEGER,
        wfIpMrtmInjectRtIndex
            INTEGER,
        wfIpMrtmInjectRtName
            DisplayString,
        wfIpMrtmInjectRtNetworks
            OCTET STRING,
        wfIpMrtmInjectRtAction
            INTEGER,
        wfIpMrtmInjectRtPreference
            INTEGER,
        wfIpMrtmInjectRtPrecedence
            INTEGER,
        wfIpMrtmInjectRtInject
            OCTET STRING,
        wfIpMrtmInjectRtInInterface
            OCTET STRING,
        wfIpMrtmInjectRtType
            INTEGER,
        wfIpMrtmInjectRtMetric
            INTEGER
  wfIpMrtmInjectRtDelete OBJECT-TYPE
       SYNTAX INTEGER {
                  create(1),
                   delete(2)
               }
      ACCESS read-write
      STATUS mandatory
      DESCRIPTION
               "Create/Delete parameter."
      DEFVAL { create }
     ::= { wfIpMrtmInjectRtEntry 1 }
```

```
wfIpMrtmInjectRtDisable OBJECT-TYPE
     SYNTAX INTEGER {
                enabled(1),
                disabled(2)
             }
     ACCESS read-write
     STATUS mandatory
     DESCRIPTION
             "Enable/Disable parameter."
     DEFVAL { enabled }
     ::= { wfIpMrtmInjectRtEntry 2 }
   wfIpMrtmInjectRtIndex OBJECT-TYPE
       SYNTAX INTEGER
       ACCESS read-only
       STATUS mandatory
       DESCRIPTION
               "Rule index number"
       ::= { wfIpMrtmInjectRtEntry 3 }
 wflpMrtmInjectRtName OBJECT-TYPE
     SYNTAX DisplayString
     ACCESS read-write
     STATUS mandatory
     DESCRIPTION
             "Rule name - user specified name for this rule"
     ::= { wflpMrtmInjectRtEntry 4 }
wfIpMrtmInjectRtNetworks OBJECT-TYPE
   SYNTAX OCTET STRING
   ACCESS read-write
    STATUS mandatory
    DESCRIPTION
            "Network identification list. This identifies which
            networks will match this rule. If non-null, The octet
            string contains one or more 3-tuples of this form:
             first octet: exact (1) or range (2)
             next 4 octets: network number
             next 4 octets: network mask
            An entry with an 'exact' tag means to only match the
            specific network advertisement (number & mask). An
            entry with a 'range' tag means to match any network
            number that falls in the range indicated by the number
            and mask.
            A null string also means 'match any route'."
     ::= { wfIpMrtmInjectRtEntry 5 }
```

FIGURE 5B

```
wfIpMrtmInjectRtAction OBJECT-TYPE
       SYNTAX INTEGER {
                   accept(1),
                   ignore(3)
               }
       ACCESS read-write
       STATUS mandatory
       DESCRIPTION
               "action. 'accept' means that the route should be
               imported from RTM to the Mrtm routing table. 'ignore'
               means don't consider the route"
       DEFVAL { accept }
       ::= { wflpMrtmInjectRtEntry 6 }
wflpMrtmInjectRtPreference OBJECT-TYPE
   SYNTAX INTEGER (0..16)
   ACCESS read-write
   STATUS mandatory
   DESCRIPTION
            "preference. This is a metric to be used to compare
           the preference path between inject route or the existing
           route in Mrtm routing table. If the injecting unicast
           route is preferred, then the value need to be set higher than
           the preference of the existing route.
           If the injecting unicast route path is preferred,
                           then the value need to be set greater than 0.
           This parameter only has meaning if the action is 'accept'."
   DEFVAL { 1 }
    ::= { wfIpMrtmInjectRtEntry 7 }
wfIpMrtmInjectRtRrecedence OBJECT-TYPE
    SYNTAX INTEGÉR
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
            "precedence. This is a metric to be used to compare
            this policy rule to other rules that a given route may
           match. A rule with a higher precedence value will be
           chosen over one with a smaller value. In the case of
           a tie, the rule index is used (larger wins).
           Note that the policy match is not most specific
           so the precedence has to be used to select from
           multiple matches."
   ::= { wflpMrtmInjectRtEntry 8 }
```

wfIpMrtmInjectRtInject OBJECT-TYPE
SYNTAX OCTET STRING
ACCESS read-write
STATUS mandatory
DESCRIPTION

"network injection list. this octet string should only be non-null if the action is 'accept' and if it is desired to insert networks into the routing table that differ from the actual advertised network. For instance, if a number of networks in a certain range are learned, an aggregate advertisement could be inserted instead of the individual networks.

If non-null, The octet string contains one 2-tuples of this form:

first 4 octets: network number
next 4 octets: network mask

Upon receiving a route that matches this filter, the network in this list will be considered for inclusion in the routing table. If the list is null, the actual received network is

considered."
::= { wfIpMrtmInjectRtEntry 9 }

wflpMrtmInjectRtInInterface OBJECT-TYPE

SYNTAX OCTET STRING ACCESS read-write STATUS mandatory DESCRIPTION

"Injected unicast routes inbound circuit list.

This octet string contains one or more 4-octet IP addresses.

If an interface address is included in this list, the unicast routes received on that interface match this rule will be accepted.

If null, this filter applies to unicast routes received on any interface."

::= { wflpMrtmInjectRtEntry 10 }

FIGURE 5D

```
static-route(1),
            rip(15),
             egp(16),
             ospf(17),
             bgp(18),
             direct-route(40),
            best-route(41),
             all-route(42)
            }
           read-write
    ACCESS
    STATUS mandatory
    DESCRIPTION
            "Select the injected route type from RTM. The value of each
             route type will be the same as unitcast route type. See
             define in ip_rt_types.h"
    DEFVAL { best-route }
    ::= { wfIpMrtmInjectRtEntry 11 }
 wfIpMrtmInjectRtMetric OBJECT-TYPE
    SYNTAX INTEGER (1..31)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
            "Route Metric. This value represents the cost of the external
             routes which are OSPF or unicast best route to be injected
             into Mrtm routing table. The default value is set to 1."
    DEFVAL { 1 }
    ::= { wfIpMrtmInjectRtEntry 12 }
             OBJECT IDENTIFIER ::= { wfMrtmGroup 1 }
wfMrtm
wfMrtmCreate OBJECT-TYPE
    SYNTAX INTEGER {
               created(1),
                deleted(2)
            }
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
            "Create/Delete parameter. Default is created.
            Users perform a set operation on this
            object in order to create/delete MRTM table."
    DEFVAL { created }
    ::= { wfMrtm 1 }
```

FIGURE 5E

```
wfMrtmEnable OBJECT-TYPE
     SYNTAX INTEGER {
             enabled(1),
             disabled(2)
     ACCESS read-write
     STATUS mandatory
     DESCRIPTION
              "Enable/Disable Parameter indicates whether
             this MRTM record is enabled or disabled."
     DEFVAL { enabled }
     ::= { wfMrtm 2 }
 wfMrtmState OBJECT-TYPE
     SYNTAX INTEGER {
                 up(1),
                 down(2),
                 init(3),
                 notpres(4)
             }
     ACCESS read-only
     STATUS mandatory
     DESCRIPTION
             "The current state of the entire MRTM."
     DEFVAL { notpres }
     ::= { wfMrtm 3 }
wfMrtmDebug OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
            "This is a debug field for PGM. Setting bits
            cause PGM to generate certain log messages.
            This field will NOT restart PGM.
            The follow bits maybe set in any combination
            (LS stands for least significant):
            0x00000001 for no display
            0x00000002 for interface to RTM
            0x00000004 for interface to policy
            0x00000008 for interface to multicast protocols
           0 \times 000000010 for route change or add or delete.
   ::= { wfMrtm 4 }
```

FIGURE SF

```
wfMrtmHoldDownTime OBJECT-TYPE
        SYNTAX INTEGER (10..60)
        ACCESS read-write
        STATUS mandatory
        DESCRIPTION
          "This value specifies, in seconds, how long a route
          will be held in MRTM table after it becomes unreachable."
  DEFVAL { 10 }
  ::= { wfMrtm 5 }
  wfMrtmFifoSize OBJECT-TYPE
  SYNTAX INTEGER (1..100)
  ACCESS read-write
  STATUS mandatory
  DESCRIPTION
          "This value represents the depth of the FIFO
           between RTM and MRTM used for the outstanding route changes.
           The memory will be pre-allocated as the size of
           x times 1000 of FIFO route entry."
  DEFVAL { 5 }
  ::= { wfMrtm 6 }
  wfMrtmEstimatedNetworks OBJECT-TYPE
      SYNTAX INTEGER (10..200000)
      ACCESS read-write
      STATUS mandatory
      DESCRIPTION
              "This parameter indicates the estimated number of routes
              per slot that the router will need to keep in its routing
              table. This value is used for pre-allocating routing tables."
      ::= { wfMrtm 7 }
wfMrtmMaxRoutes OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
            "Max number of routes, per slot. This is used to limit
            the size of routing tables. Note that routes are kept on a
            per-source network basis, independent of multicast group."
    ::= { wfMrtm 8 }
 wfMrtmActualRoutes OBJECT-TYPE
     SYNTAX INTEGER
     ACCESS read-only
     STATUS mandatory
     DESCRIPTION
             "Total actual entries currently in the routing table"
     ::= { wfMrtm 9 }
```

FIGURE 56